
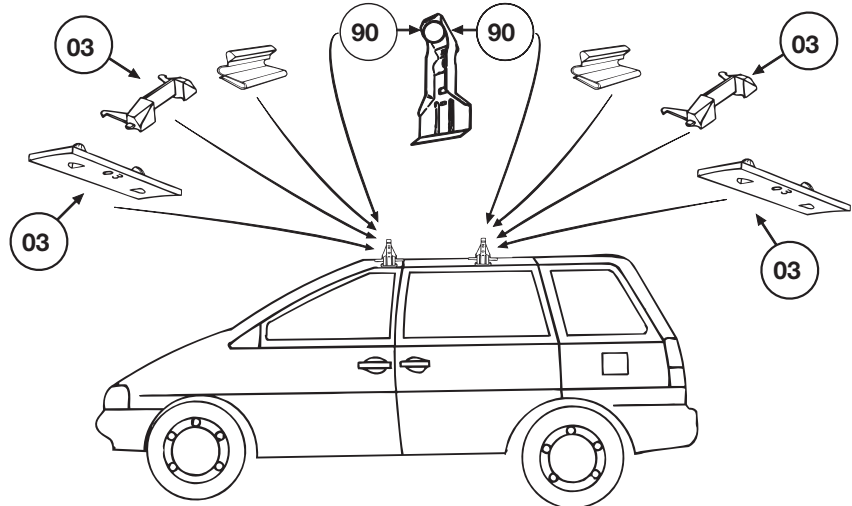
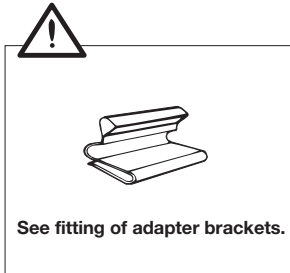
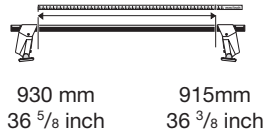
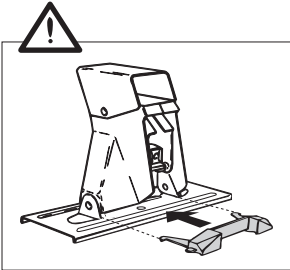





# Thule System Kit 102

Nissan Prairie, 89-



**GB**

The adapter brackets are designed for permanent installation on your vehicle.

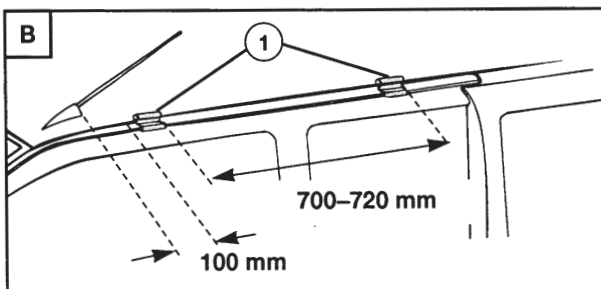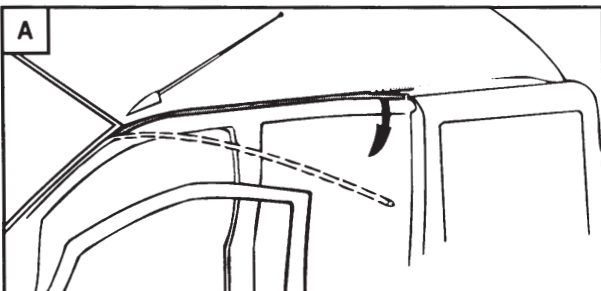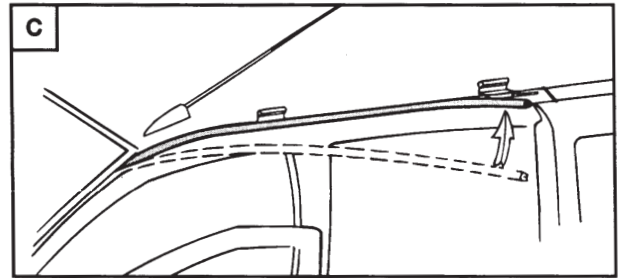

**GB**

**FIG A.** Remove the weatherstrip **gently** by pulling it away from the door  
**FIG B.** Position the load carrier adapter brackets (1) on the metal strip by pushing them against it. The right position is shown in the Fig B.  
**FIG C.** Replace the door weatherstrip.

