






Thule System Kit 115





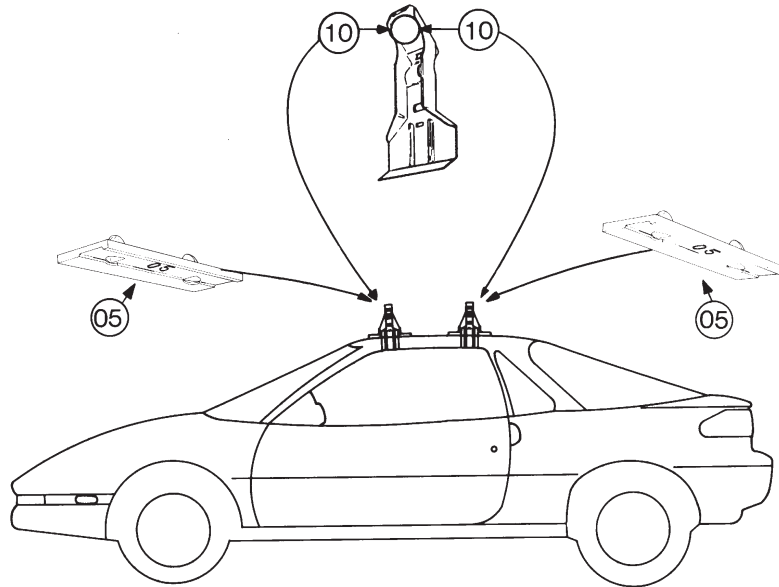



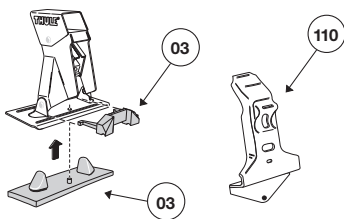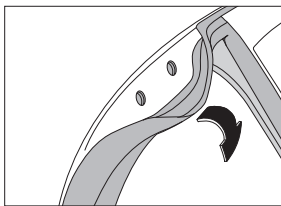
















GEO Storm



949•4EF/501-0115

Thule System Kit 116



| | | Front | Rear | |
|---|--------------------------------------|---|--------------------|---|
|  | OPEL Vectra 4-dr, 88-95 |  920 mm/36 1/4 inch | 892 mm/35 1/8 inch |  |
| | OPEL Vectra 5-dr, 88-95 |  920 mm/36 1/4 inch | 900 mm/35 3/8 inch |  |
| | OPEL Vectra 4-5-dr, 96- |  925 mm/36 3/8 inch | 908 mm/35 3/4 inch |  |
| | SAAB 900 5-dr, 93- |  890 mm/35 inch | 858 mm/33 3/4 inch |  |
| | SAAB 9000 5-dr, 85-93 |  946 mm/37 1/4 inch | 945 mm/37 1/4 inch |  |
| | SAAB 9000 4-dr, 88-97 |  955 mm/37 5/8 inch | 945 mm/37 1/4 inch |  |
| | SAAB 9000 5-dr, 91- |  948 mm/37 3/8 inch | 945 mm/37 1/4 inch |  |
| | SAAB 9-5, 98- |  1005 mm/39 5/8 inch | 978 mm/38 7/8 inch |  |
| | SAAB 9-3, 98- |  890 mm/35 inch | 858 mm/33 3/4 inch |  |
| | VAUXHALL Cavalier 4-dr, 88-95 |  920 mm/36 1/4 inch | 892 mm/35 1/8 inch |  |
| | VAUXHALL Cavalier 5-dr, 88-95 |  920 mm/36 1/8 inch | 900 mm/35 3/8 inch |  |
| | VAUXHALL Vectra 4-5-dr, 96- |  925 mm/36 3/8 inch | 908 mm/35 3/8 inch |  |

822•4EF/501-0116