

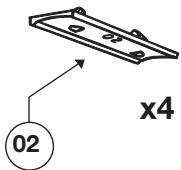


Thule System Kit 117

HONDA Accord 4-dr, 90-
HONDA Accord 2-dr, 90-




x4

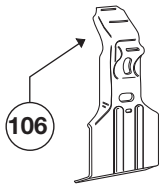




x4

Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.

During the fitting.

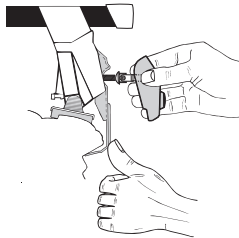



After the fitting

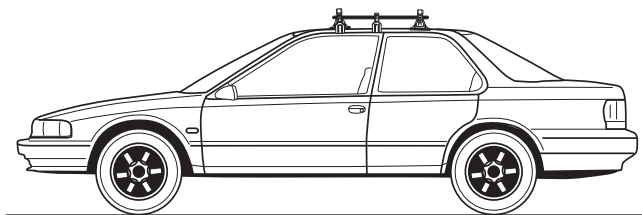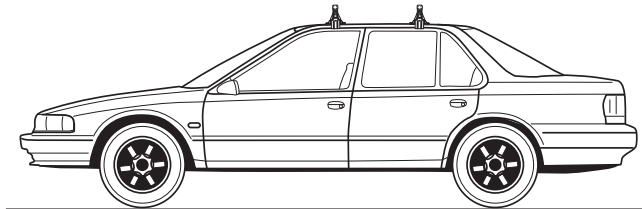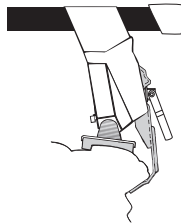

505•4DF/501-0117-02

Thule System Kit 118

LEXUS 400

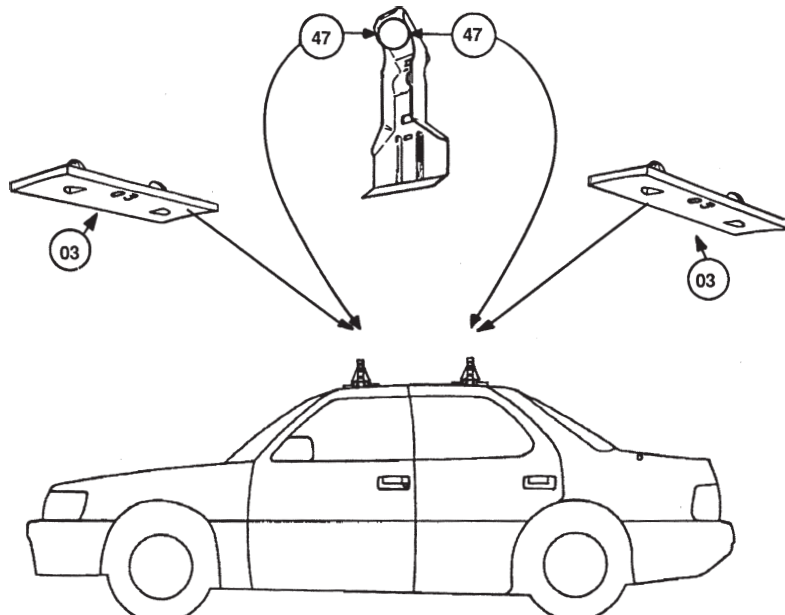

003•4EF/501-0118