



Thule System Kit 126

ACURA Legend 4-dr, 91- (US)
HONDA Legend 4-dr, 91-

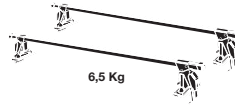


Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.

During the fitting.

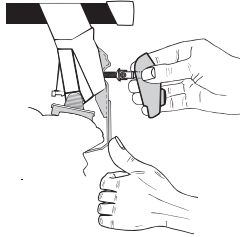

After the fitting

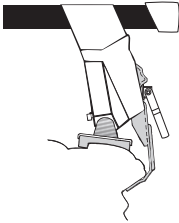


Front



Rear

1014 mm / 43 7/8 inch

970 mm / 38 1/4 inch

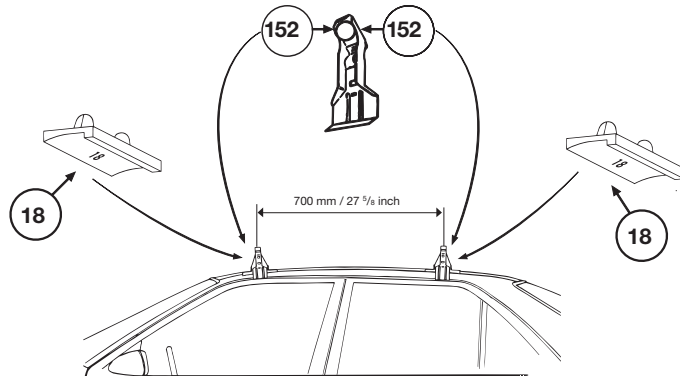


ACURA Legend Coupé 2-dr, 91- (US)
HONDA Legend Coupé 2-dr, 91-


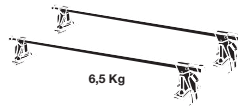


Screw the load carrier into position alternating between the feet, and maintaining constant pressure on the bracket.

During the fitting.

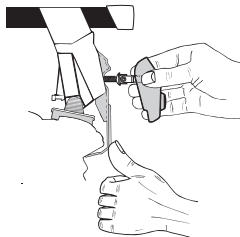

After the fitting

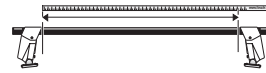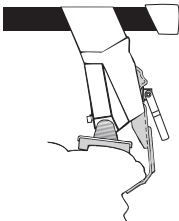

Front

Rear

970 mm / 38 1/4 inch

965 mm / 38 inch

