
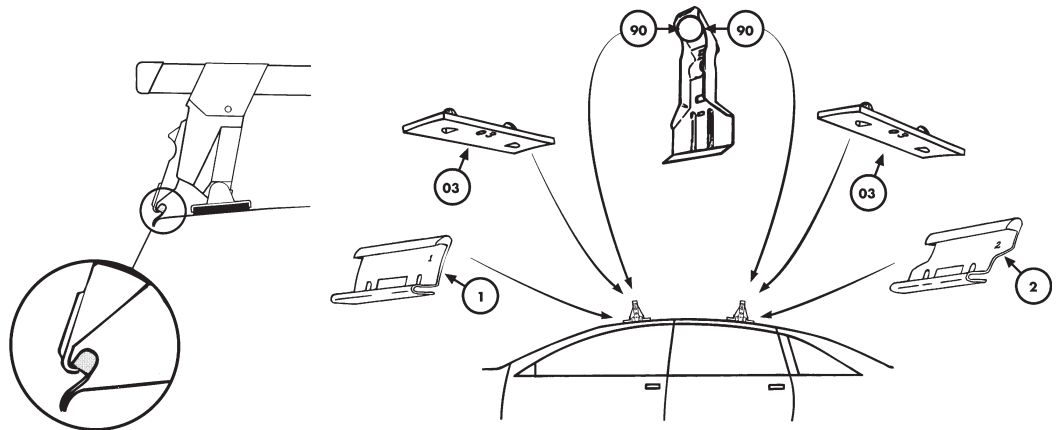


Thule System Kit 140

CHEVROLET Caprice 4-dr sedan, 91-

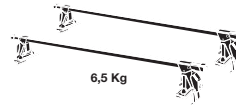


GB
Gently pull the door frame's rubber gasket away from the vehicle. Install the attachment clips onto the vehicle by pushing them onto the welded gutter. See the figure for correct positioning.

The attachment clips should always be left on the vehicle. The roof rack can be mounted and dismounted as you wish.










Front	Rear
1075 mm / 42 ³ / ₈ inch	1040 mm / 41 inch

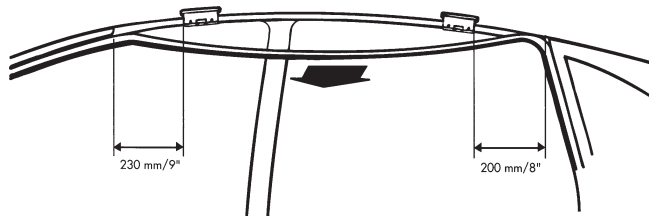

125•4DF/501-0140-02

Thule System Kit 141

CHEVROLET Lumina Van
OLDSMOBILE Silhouette Van
PONTIAC Trans Sport

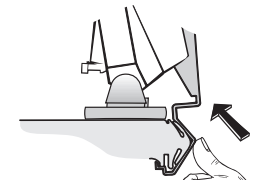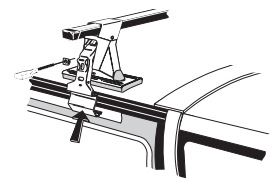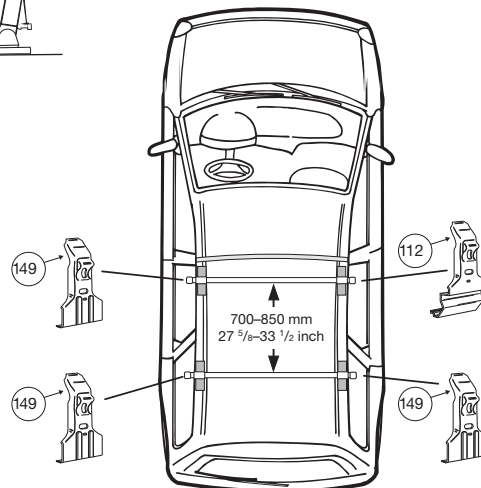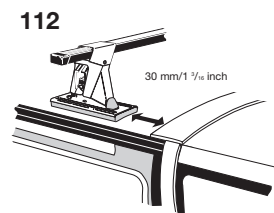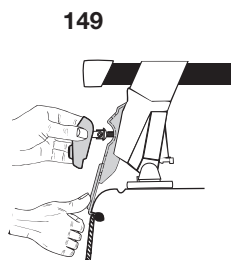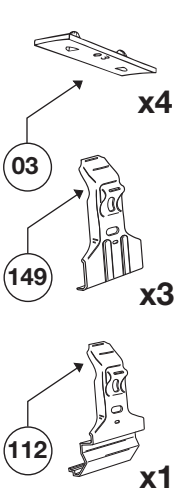

Front	Rear
1210 mm / 47 ⁵ / ₈ inch	1195 mm / 47 ¹ / ₈ inch

512•4EF/501-0141-02