

THULE[®]
SWEDEN

- S** Monteringsanvisning
- GB** Fitting instructions
- D** Montageanleitung
- F** Instructions de montage
- NL** Montage-instructies
- FIN** Asennusohje
- E** Instrucciones de montaje
- I** Istruzioni per il montaggio
- CZ** Návod na montáž
- PL** Instrukcja montażu
- HU** Szerelési utasítások
- RU** Инструкции по установке
- EST** Paigalduseeskirjad
- SLO** Navodila za pritrjevanje

한국어 장착 지침

日本語 取扱(取付)説明書

中文 安装说明

Kit 2124

1061-1-2124

TOYOTA Prius, 4-dr Sedan, 01-03 (USA)

TOYOTA Prius, 4-dr Sedan, 98-99, 00- (EUR)

TOYOTA Scion Xb, 5-dr MPV, 04- (USA)

CHEVROLET Aveo, 4-dr Sedan, 04-


CHEVROLET Aveo, 5-dr Hatchback, 04-

Se não houver instruções no seu idioma, entre em contato com os funcionários do estabelecimento para obter informações

Eğer talimatlar dilinizde basılı değilse, lütfen atölye personelinden bilgi isteyiniz.

Αν οι οδηγίες δεν εκτυπώνονται στη γλώσσα σας, παρακαλούμε ζητήστε πληροφορίες από το προσωπικό του καταστήματος.

ถ้าไม่มีคำแนะนำในภาษาของคุณ โปรดติดต่อพนักงานในร้านเพื่อขอข้อมูล

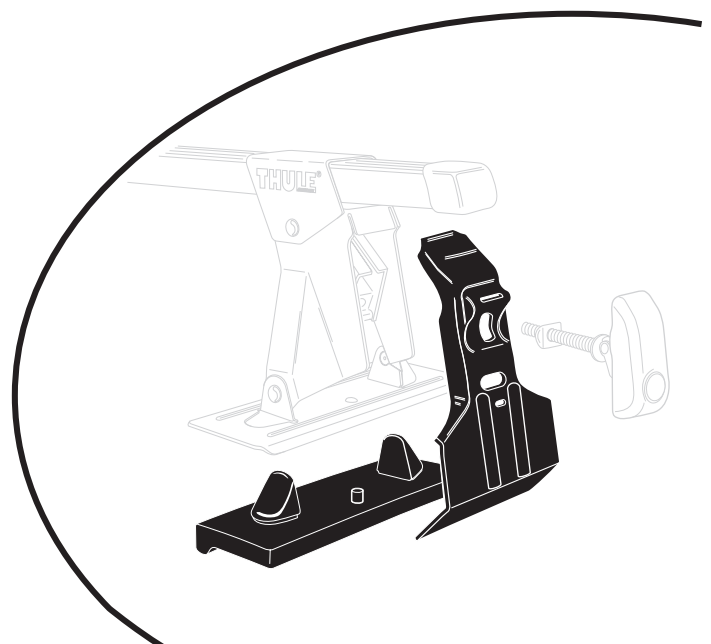


THULE[®]
SWEDEN

Box 69, 330 33 Hillerstorp, SWEDEN
www.thule.com

438*4DF/501-2124-03


Follow me...

1


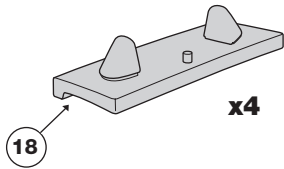


18


x4

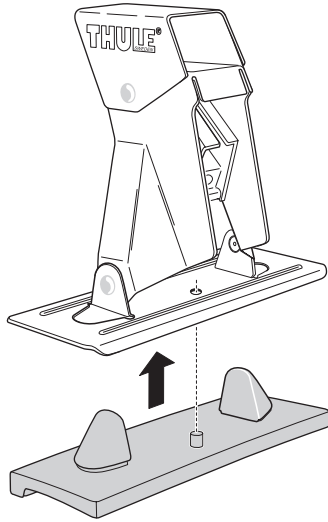


2



TOYOTA Prius	1035 mm 40 3/4 inch	1022 mm 40 1/4 inch
TOYOTA Scion Xb	1140 mm 44 7/8 inch	1130 mm 44 1/2 inch
CHEVROLET Aveo 4-dr	946 mm 37 1/4 inch	903 mm 35 1/2 inch
CHEVROLET Aveo 5-dr	945 mm 37 1/4 inch	893 mm 35 1/8 inch

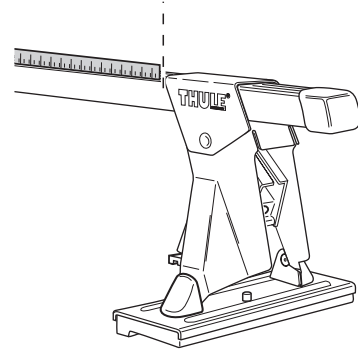

3

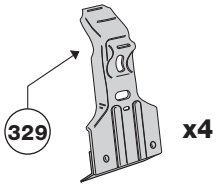


329

x4

CHEVROLET Aveo, 5-dr

280 mm
11 inch



762 mm
30 inch

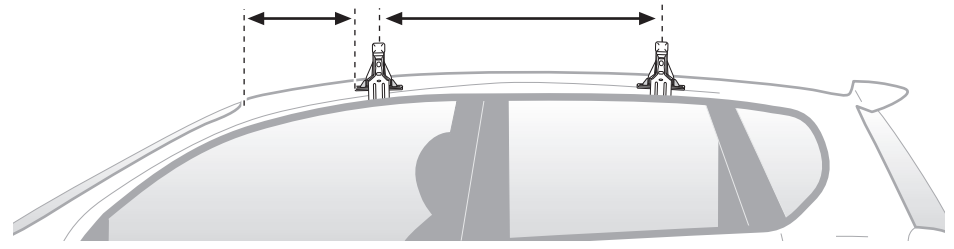

TOYOTA Scion Xb


420 mm
16 1/2 inch

686 mm
27 inch

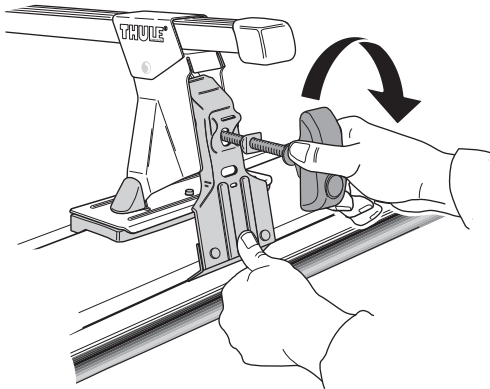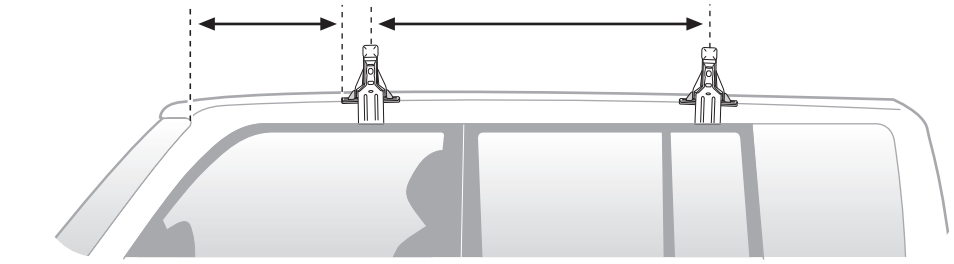

A

B

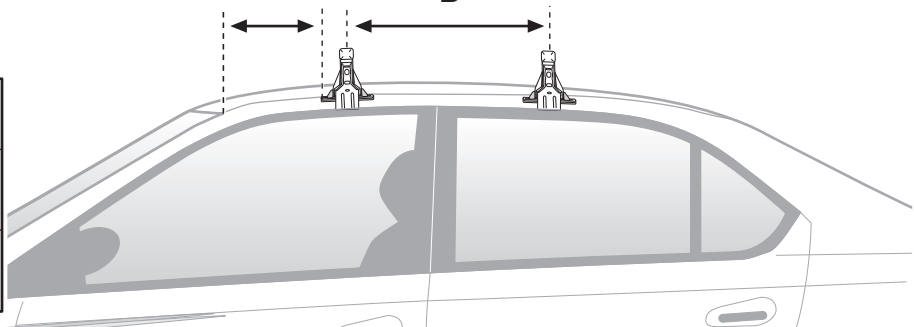

	TOYOTA Prius	CHEVROLET Aveo 4-dr
A	241 mm 9 1/2 inch	280 mm 11 inch
B	685 mm 27 inch	610 mm 24 inch